


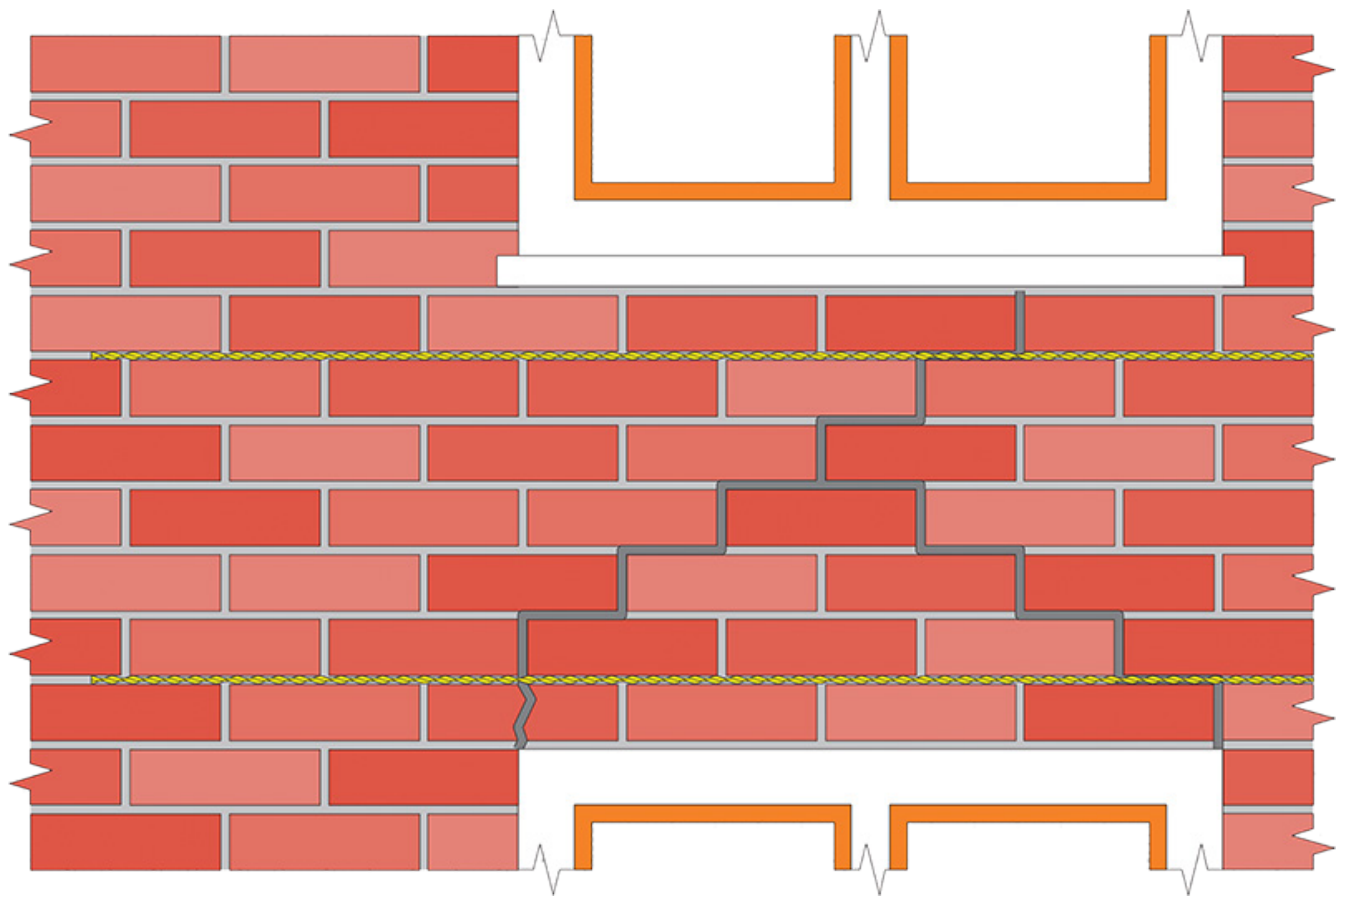

Method Statement

⚠ Read the safety information overleaf

1. Rake out or cut slots into the horizontal mortar joints
2. Vacuum out the slots and thoroughly flush with water
3. Using the Bond Flex gun kit, insert a 10 mm depth bead of Bond Flex into the back of the slot
4. Using the finger trowel, push the Bar Flex into the bead of Bond Flex, ensuring good even coverage
5. Repeat steps 3-4 with a second bead of Bond Flex and second Bar Flex
6. Insert a final bead of Bond Flex over the exposed Bar Flex and iron into the slot using a finger trowel
7. Re-point or fill the joint and leave ready for any decoration

Guidelines

- A. Depth of slot is between 40 mm and 55 mm
- B. Bar Flex to extend a minimum of 500 mm each side of the opening
- C. Where Bar Flex is joined for long runs, a minimum of 500 mm overlap should be allowed

Materials



6 mm Bar Flex



Bond Flex



Water

Tooling



Angle Grinder



Vacuum



Bond Flex Gun Kit



Finger Trowel

Safety Equipment



Dust Mask



Eye Protection



Hand Protection



Ear Protection